


SAFETY INTERLOCK KIT

FOR 61, 62, 66, 84 & 85 SERIES HOUSINGS




Prevent operators opening the housing while under pressure with the **Safety Interlock Kit**.

Pressurised filtration systems can be dangerous if not operated with care. It has been known in some cases for operators to try and loosen the V-Clamp retainer before the pressure is released from the housings.

This can obviously lead to physical injury through components releasing violently as well as the potential for exposure to the liquid being filtered which could be harmful.

The **Safety Interlock Kit** is simply placed over the V-Clamp and vent valve. Until the vent valve is opened to the vertical position it is impossible to remove the V-Clamp. Simple but effective.

It is suitable for use on the 61 & 62 Series 3 and 5-stack housings, 6601 Series and the 84 & 85 Series with V-Clamp closures.

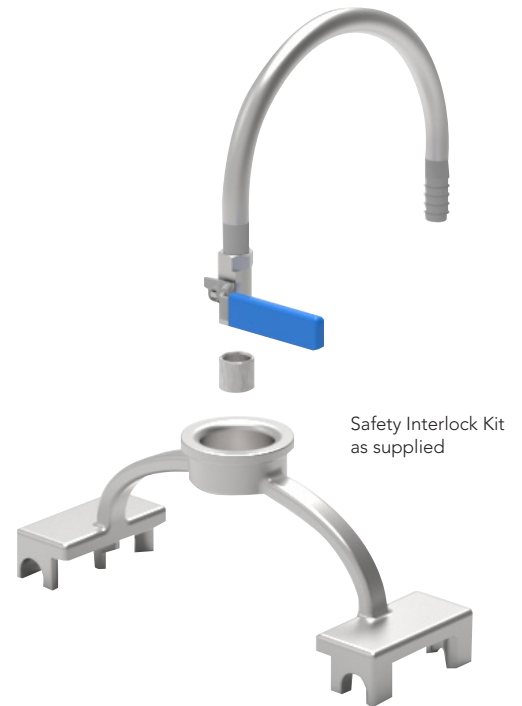

Technical Data

Materials of Construction:

Wetted Parts: 316L Stainless Steel
 Non Wetted Parts: 304 Stainless Steel

Ordering Guide

Stock Code	Description
60SSC168001	168mm V-Clamp safety kit (Suitable for 61, 62 Series)
60SSC204001	204mm V-Clamp safety kit (Suitable for 61, 62, 66, 84 & 85 Series)



Safety Interlock as supplied



Safety Interlock in place on housing V-Clamp

AMAZON