

52 SERIES

Single Stack Filter Housing

The **52 Series** single cartridge housing is a further development of the successful **51 Series** housing. Still with the ability to accept both standard Double Open End and Single Open End cartridges, this single stack housing has an enhanced Cast clamp and solid ring closure. This provides a housing with a higher pressure rating that has proved very successful in a wide variety of applications within both the liquids and low pressure gas processing industries.

The **52 Series** will accept the full range of Amazon and industry standard cartridges ranging from 0.1 to 500µm with nominal lengths of 5, 10, 20 and 30".

Product Features

- Quick release cast Vee Clamp
- Closure for easy opening
- Lightweight, high specification investment cast head
- Easy to use tie rod assembly design ensures cartridge centralisation (for a reliable knife edge seal) that enables the use of either 9.75" or 10" cartridge length configurations (or multiples) in the same housing
- Dual purpose head accepts SOE code 3 and DOE cartridges
- SOE code 7 and code B adaptors available
- Available in 316L stainless steel or Alloy 22 for maximum compatibility
- Wide range of connection size and types, cartridge lengths and materials of construction
- PED Compliant to Cat I
- Full traceability on all parts, material certification packs available
- Rated to 20 bar g liquid, 20 bar g gas
- DWI Approved product







Double Open Ended

Single Open Ended



Differential Pressure Gauge



Accessories	
Pressure Gauge and Vent Valve Kit	
Ball Valve and Nipple	
Stand	
Mounting Bracket	

Features and Benefits

- Investment Cast head (avoids the porosity & inclusion problems associated with lower quality sand castings)
- Integral vent and drain sockets to aid efficient filter changeout complete with PTFE washer
- Unique interchangeable configuration enables choice of plug in or DOE cartridge styles in the same housing
- Every housing is etched with a serial number for full traceability
- Full housing customisation service available
- Available in both 316L Stainless Steel and Alloy 22
- DWI Approved product

Product Range

Amazon Filters design and manufacture an extensive range of liquid filtration systems, providing one of the widest selections of filtration vessels, depth filters and pleated cartridges available today, ensuring excellent process and filter compatibility. As one of Europe's leading manufacturers of filtration systems, Amazon Filters is able to offer a solution to meet all filtration requirements. Amazons' filters are manufactured in clean room conditions and all products come with detailed Product Validation Guides and Technical Support documentation.



AMAZON

52 Series Technical Data

Maximum Operating Conditions

Pressure Range:	Liquid:	FV / 20 bar g
	Gas Group 1:	FV / 20 bar g - 10" FV / 12 bar g - 20" FV / 9 bar g - 30" FV / 20 bar g
Temperature Range:	Gas Group 2:	-10°C / 150°C

Materials of Construction

Body and Closure:	316L St.Steel
	Alloy 22
Clamp:	304 St.Steel

Finish

Vessel:	Externally polished sump, bead blast head
---------	---

Connections

Inlet/Outlet:	1" BSPF
Vent:	1/4" BSPF with Plug
Drain:	1/4" BSPF with Plug

Model	Dimensions					Volume (Litres)	Dry Weight (kg)
	A	B	C	D	E		
5"	223	-	-	120	173	1.5	2.3
10"	350	-	-	120	300	2.2	2.6
20"	608	-	-	120	554	3.7	3.7
30"	858	-	-	120	808	5.1	4.6

PED*/PESR Status:** Compliant with PED 2014/68/EU and PESR 2016 No. 1105

Fluid Groups: Gas Group 1 + 2
Liquids Group 1 + 2


Marking: CE

Exceptions: Group 1 liquids - Explosive
ATEX: Compliant with 2014/34/EU and
Explosive Atmosphere Regulations 2016
II 2G Ex h IIC T150 Gb
II 2D Ex h IIIC T150 Db

* Pressure Equipment Directive

** Pressure Equipment (Safety) Regulations No. 1105

Technical drawings for each individual housing showing dimensions, volume, weights, maximum temperatures and design pressures available on request.

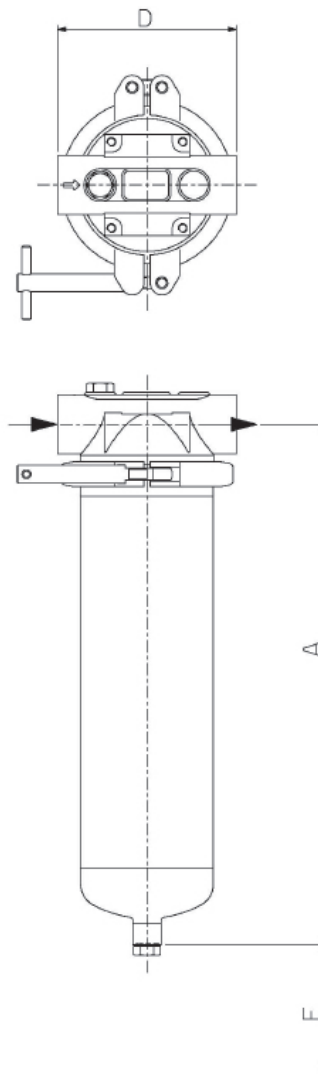

Ordering Guide

5201	1	0	A	N	10	B	1	C	E
No of Stacks	Cartridge Length	Cartridge End Cap Style	Closure Style	Mounting	Connection	Connection Type	Materials	Finish	Seal
5201 - 1	0 - 5" 1 - Single 10" 2 - Double 20" 3 - Triple 30"	0 - Code 0 B - Code B 3 - Code 3 7 - Code 7 I - MCY1000 Insert*1	A - Cast Vee Clamp	N - None E - Bracket K - Double Vent L - Double Vent & Bracket T - Differential Pressure Gauge & Bracket*2	10 - 1" 15 - 1 1/2"	B - BSPF (1" only) E - EN1092-1 Flange PN40 J - ASME Flange 300# L - BS4825-3 Tri Clamp M - DIN11851 - Male S - DIN2633 Flange T - NPTF (1" only)	1 - 316 st.st (L Grade) 4 - Alloy 22	C - Externally Polished Sump, Bead Blast Head J - Externally Polished Sump, Bead Blast Head (Alloy 22 Option Only)	E - EPDM F - FEP / Silicone S - Silicone V - Viton G - FEP / Viton

Example: 520110AN10B1CE = 52 Series, 1 x 10" DOE cartridge, cast vee clamp closure, No mounting, 1" BSPF connections. St.Steel construction with EPDM gaskets, externally polished sump with bead blast head. *1 Can not be converted to accept code 3 cartridges. *2 Only rated for temperatures of -10°C/90°C

AMAZON FILTERS LTD.

Albany Estate, Camberley, Surrey, GU16 7PG, ENGLAND

Tel: +44 (0) 1276 670 600 Email: sales@amazonfilters.co.uk Web: www.amazonfilters.com