

# SUPAMESH

## Stainless Steel Filter Cartridges



SupaMesh stainless steel filter cartridges are for use in a wide range of applications and industries, suitable for use in both liquids and gases.

All SupaMesh cartridges are manufactured from 316 stainless steel throughout. They are available in both plain cylindrical and pleated configurations, using the very latest in high specification mesh or sintered metal fibre media. Each design provides a simple sleeve of filter medium supported by a central core. The pleated design provides over twice the effective filtration area of the cylindrical cartridge. The plain cylindrical sintered metal powder cartridges are self supporting.

In all designs, the construction method used is fully welded with no adhesives or glues used. This method of construction guarantees cartridge integrity, eliminating the risk of bypass and the presence of extractables derived from any bonding agents.



### Unique Construction

Modular assembly up to 745mm (30") long, 316 Stainless steel, welded for ultra clean assembly

- **SS Grade** - Nominal rated precision woven mesh, available 5 - 840µm
- **SF Grade** - Absolute rated Sintered metal fibre, available 3 - 60µm
- Optional backwash cage for enhanced mechanical strength
- **SP Grade** - Sintered powder media, available 6-60µm

### Product Features

SupaMesh cartridges are available with many standard industrial end cap configurations and seal materials, including the Junior size at 2.5 and 5" lengths. They are available with optional outer guards for reverse flow or backwashing to enhance their superior robust design.

The method of construction and materials used allow for use from -150°C to +300°C and up to 25 bar differential pressure in normal flow direction.

## Features and Benefits

- All 316 stainless steel construction for wide chemical resistance
- Individually marked with full product code
- Choice of precision woven wire, sintered metal fibre and sintered powder media
- Wide range of ratings from 3µm through to 840µm
- Fully welded construction for all grades
- Full material traceability
- Suitable for use from -150°C to 300°C
- No adhesives or bonding agents use
- Junior (56mm) and Standard (66mm) diameters

## Industries and Applications

- |                        |   |
|------------------------|---|
| <b>Pharmaceuticals</b> | • Steam, Solvents, Chemicals                          |
| <b>Fine Chemicals</b>  | • Polymers, Acids, Bases, Solvents                    |
| <b>Cosmetics</b>       | • Alcohol, Creams, Lotions, Waxes, Oil based solution |
| <b>Water Treatment</b> | • Potable water, Resin trap                           |
| <b>Automotive</b>      | • Blanking wash oils, Mastic lines                    |
| <b>Petrochemicals</b>  | • Amine stream, Glycol solutions                      |



AMAZON

# SupaMesh Technical Data

## Dimensions

|                       |              |                    |                    |
|-----------------------|--------------|--------------------|--------------------|
| Outside Diameter:     |              | Standard 10"       | Junior 5"          |
|                       |              | 66mm               | 56mm               |
| Typical Surface Area: | Cylindrical: | 0.05m <sup>2</sup> | 0.02m <sup>2</sup> |
|                       | Pleated:     | 0.13m <sup>2</sup> | 0.08m <sup>2</sup> |

## Maximum Operating Conditions


Temperature: 300°C

## Recommended Maximum Differential Pressure:


|               |                              |        |
|---------------|------------------------------|--------|
| Forward Flow: | Cylindrical:                 | 15 bar |
|               | Pleated:                     | 25 bar |
| Reverse Flow: | 3 bar with backflush support |        |

The flow rate curves are for 10" plain cylindrical elements. To gain the clean pressure loss for all pleated elements, multiply the cylindrical element clean loss by 0.4.

## 10" Mesh (66mm Dia), Cylindrical Element

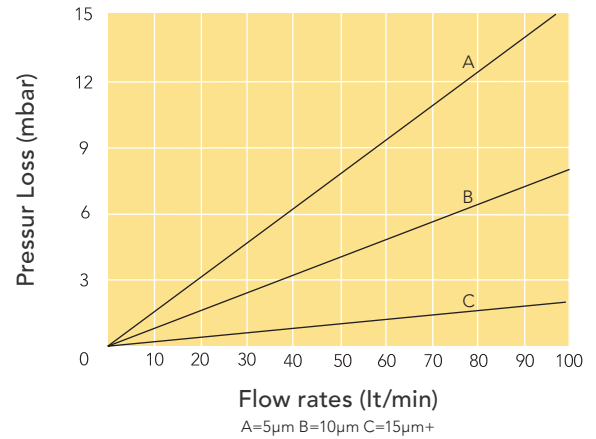

## 10" Metal Fibre (66mm Dia), Cylindrical Element

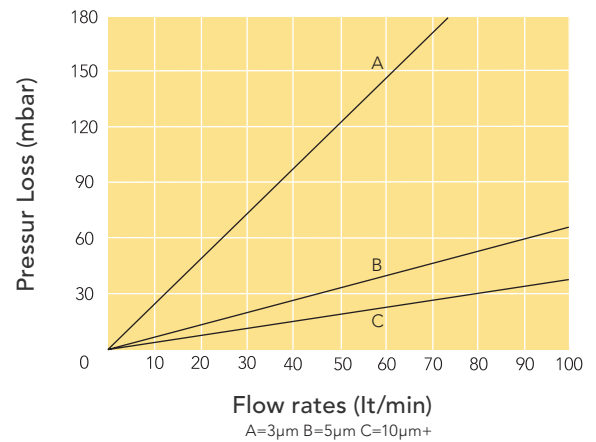

## Ordering Guide

| 05SF                                | C                         | 005 -            |                   |                    | 09                      | 0                             | E                             | A          |                            |
|-------------------------------------|---------------------------|------------------|-------------------|--------------------|-------------------------|-------------------------------|-------------------------------|------------|----------------------------|
| Media/Core                          | Core/Assembly             | Micron Rating    |                   |                    | Length                  | End Caps                      | Seal                          | Branding   | Options                    |
| 05SS - 316 Stainless Steel Mesh     | C - Cylindrical           | <b>SS - Mesh</b> | <b>SF - Fibre</b> | <b>SP - Powder</b> | 02 - 62mm <sup>12</sup> | 0 - Code 0                    | B - Buna                      | A - Amazon | C - Trueseal <sup>13</sup> |
| 05SF - 316 Stainless Metal Fibre    | B - Cylindrical + Support | 005 - 5µm        | 003 - 3µm         | 006 - 6µm          | 05 - 118 <sup>12</sup>  | 2 - Code 2                    | E - EPDM                      |            |                            |
| 05SP - Sintered Powder <sup>1</sup> | P - Pleated + Support     | 010 - 10         | 005 - 5           | 010 - 10           | 05 - 123                | 3 - Code 3                    | F - FEP / Silicone (SOE Only) |            |                            |
|                                     |                           | 020 - 20         | 010 - 10          | 015 - 15           | 09 - 248                | 7 - Code 7                    | G - FEP / Viton (SOE Only)    |            |                            |
|                                     |                           | 040 - 40         | 015 - 15          | 030 - 30           | 19 - 494                | 8 - Code 8                    | S - Silicone                  |            |                            |
|                                     |                           | 070 - 70         | 020 - 20          | 060 - 60           | 29 - 745                | J - Junior 56mm <sup>12</sup> | T - PTFE (DOE Only)           |            |                            |
|                                     |                           | 100 - 100        | 030 - 30          |                    |                         |                               | V - Viton                     |            |                            |
|                                     |                           | 250 - 250        | 040 - 40          |                    |                         |                               |                               |            |                            |
|                                     |                           | 450 - 450        | 060 - 60          |                    |                         |                               |                               |            |                            |
|                                     |                           | 840 - 840        |                   |                    |                         |                               |                               |            |                            |

Example: 05SFC005-090EA = Cylindrical Stainless metal fibre, 5µm rating, single length 10" long (248mm), Code 0 connections with EPDM seal.

<sup>1</sup> Not Junior, Cylindrical only

<sup>12</sup> Junior Cartridges available in 2.5 & 5", Code J, Single Open, End Only

<sup>13</sup> Junior 56mm only

# AMAZON FILTERS LTD.

Albany Park Estate, Camberley, Surrey, GU16 7PG, ENGLAND

Tel: +44 (0) 1276 670 600 Email: sales@amazonfilters.co.uk Web: www.amazonfilters.com

SupaMesh is a trademark of Amazon Filters Ltd.

AMAZON FILTERS LTD. reserve the right to change specification without prior notice, as part of their continuous product development programme.